DCS 6000

User Manual

Digital Conference System

SW 6000 Conference Management Software Version 3.3

CUA Conference User Application

User Manual

Danish Interpretation Systems **DIS**

Copyright © 2006 DIS **CUA USER MANUAL VER 3.3.DOC** **04-05-2006**

No part of this publication may be reproduced or utilised in any form or by any means without permission in writing from the publisher.

List of Contents

List of Contents **3**
Description of the DCS 6000 system **5**
Features **5**
System components **5**
Central equipment 5
Interpreter equipment 5
Conference equipment and channel selectors . 5
Operating instructions **6**
SW 6000 – CUA application **6**
General description 6
Features 6
Starting the CUA **7**
Starting the CUA with high VGA resolution .. 7
Language selection **8**
Login **9**
Main menu 10
Panel buttons 10
Main **12**
Microphones **13**
Speakers 14
Requests 14
Last Five Speakers List 15
Mimic Diagram **16**
Agenda **18**
Results **19**
Delegate **20**
Messages **21**
Conference **23**
Stop/start a conference 23
Speech time limit 24
Microphone Parameters 25
Microphone Operation Mode 25
Microphone Interrupt Ability 26
Configuration menu **27**
Interpretation **28**
Speakers & Request 28
Language channels 29
Volume Control **31**
Mic Attenuation **32**
System Messages **33**
AO unit **34**
Selecting an AO unit 34
Channel Selection 35
Volume Control 35
Display control **36**
Main Menu **39**
Voting **40**
Attendance check 41
Start voting session 42
Stop voting session 44
Vote from CUA 44
3 button voting from CUA 45
5 buttons voting from CUA 46

N

No part of this publication may be reproduced or utilised in any form or by any means without permission in writing from the publisher.

Description of the DCS 6000 system

Features

The SW 6000 Conference Management Software for PC opens a completely new way of managing conferences. It is designed to operate with the hardware units, which are part of the DCS 6000 system

DCS 6000 system is a complete "State of the Art" fully digital integrated interpretation, discussion and voting system offering interpretation, language distribution, conference microphone and voting facilities with attendance check with Chip Card ™.

The DCS 6000 system is based on a new, unique digital DATA and AUDIO bus using standard network cable. This ensures a very cost effective installation and easy set-up of portable systems.

A total of 4000 units (delegate or interpreter units) can be connected to the system.

The DCS 6000 system can be operated with or without a PC. If external operation of the system is needed the CU 6010 features a RS232/RS422 connection for PC or control system such as AMX or Crestron.

System components

The DCS 6000 system consists of various units.

Central equipment

CU 6010	Central Unit with built-in network controller and power supply
EX 6010	Extension Power supply
AO 6008	Audio Output box
JB 6002	Junction Box with 2 outputs
JB 6004	Junction Box with 4 outputs

Interpreter equipment

IS 6132P	Interpreter Set
LS 6132P	Interpreter Loudspeaker

Conference equipment and channel selectors

CS 6032FV/H	Channel Selector (flush mounted)
CM/DM 6010P	Conference Unit (portable)
CM/DM 6020P	Conference Unit (portable) with XLR microphone connector
CM/DM 6070P	Conference Unit (portable) with two built-in channel selectors
CM/DM 6090P	Conference Unit (portable) with two built-in channel selectors and XLR microphone connector
CM/DM 6060F	Conference Unit (flush mounted) with one built-in channel selectors
CM/DM 6510F	Conference Unit (flush mounted) with Chip-card and 3 voting buttons
CM/DM 6560F	Conference Unit (flush mounted) with one built-in channel selector, Chip-card and 3 voting buttons
MU 6040C/D	Microphone Unit for use with customised front plate with Loudspeaker, Microphone and Buttons. Available in Delegate (D) and Chairman (C) version
MU 6042D	Dual Microphone Unit for use with FD/FC front plate with Loudspeaker, Microphone and two delegate Buttons
AM 6040	Ambient Noise Microphone

Operating instructions

SW 6000 – CUA application

General description

The SW 6000 software package consists of several main applications:

CUA Conference User Application

CAA Conference Administrator Application

CDA Conference Display Applications

ECA External Control Application

The software package has the following main features:

- Client/server system for multiple PC's
- Multiple User profiles with different functionality
- Full language support
- Very user friendly Graphical design of high quality
- Data stored in SQL database format
- Voting from CUA screen

Features

The main features of the CUA Conference User Application are:

- Used by the Chairman, Interpretation Manager, Delegates or other persons attending or managing a conference.
- Also used by a Technician for monitoring conferences and to configure and setup parameters
- The functionality is controlling of microphones, voting, interpretation, intercom, messaging, agenda and delegate information.
- The functionality depends on the user profile and facilities installed.
- Designed for use with both touch screen and mouse/keyboard.

Starting the CUA

After the CUA has been installed, the CUA shortcut is placed on the Desktop and in the start folder.

Clicking the CUA shortcut start the application.

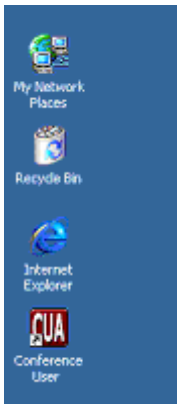

Starting the CUA with high VGA resolution

If the resolution of the VGA screen running the CUA application is higher than 1024x768 the application will start up in a window:

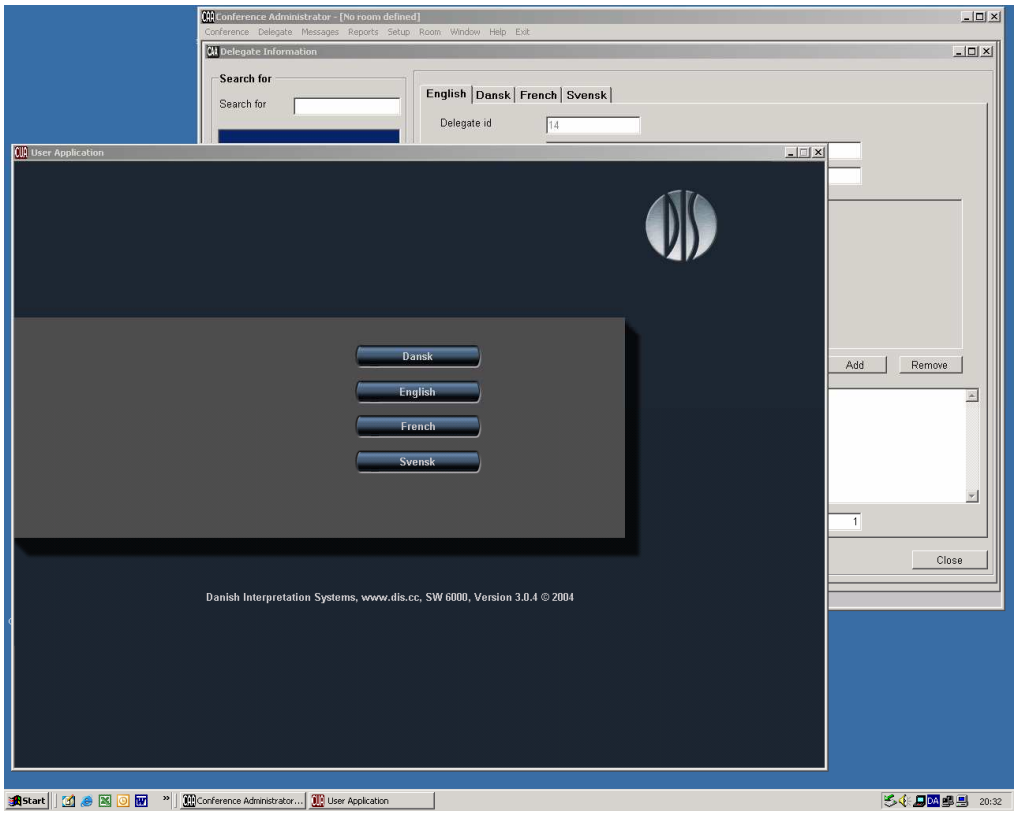

Language selection

After starting the application, the user will be presented for the Language Selection screen. The user must always select a language.

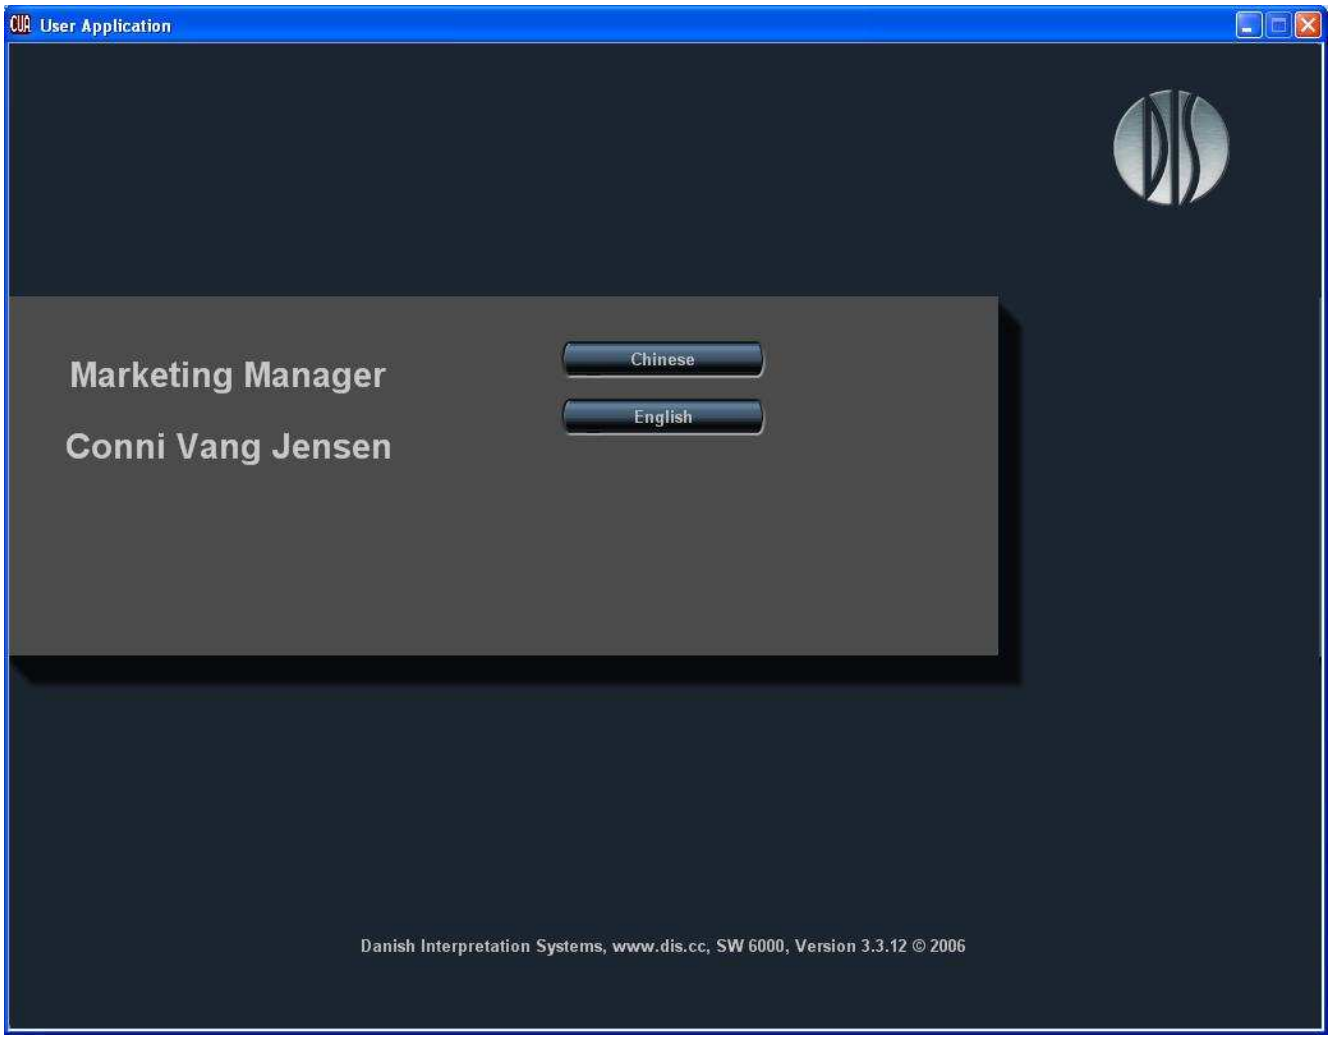

If a conference with a "Prepared Delegate List" or "Login using code and list" is started then the name and position of the user or delegate will be displayed next to the language selection buttons.

The users can select any of the presented languages to have a complete user interface presented to them in their preferred language.

If some data or information like delegate names etc. have not been entered in the selected language then the information will be presented automatically in the system's default language.

Login

If a conference is started, which requires all users to login using a personal code then the following screen will be displayed after selecting a language.

The users must enter their numeric code and press [Login]. Mistakes made when entering the code can be erased by pressing [Clear]. There is no limit to how many times the users can retry to enter their code.

Press [Return] to go back to the language selection screen.

Main menu

After a successful login a menu will be presented to the user. Each selection on the menu calls one of the screens, which are described one by one in this manual.

The menu selections available to the user depend on the settings that were assigned to the user or the seat by the CAA Conference Administration Application during configuration of the seats and assigning of roles when adding delegates.

Selecting the Configuration Menu displays new buttons to access screens for changing parameters and settings.

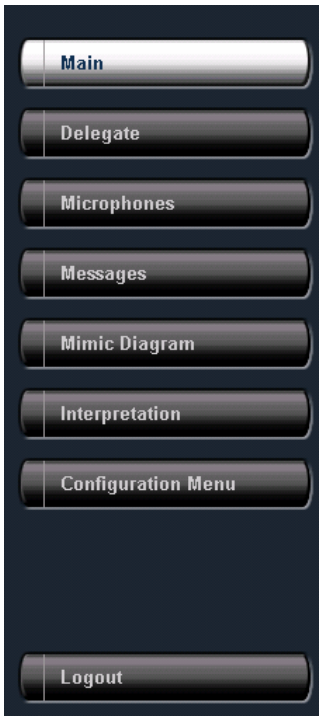

Panel buttons

The buttons on the panel available to the user depend on the settings of the role that was assigned to the user or the seat by the Conference Administration Application during configuration of the seats and assigning of roles when adding delegates.

Speak button

The speak button in the right bottom corner can be used for switching ON the microphone or for request to speak. The functionality is similar to the button on the microphone unit.

The ring around the button indicates the state of the microphone:

Neutral	The microphone is off.
Green	The user's request to speak is placed on the request list to be granted speak right by a Conference Administrator or Chairman.
Red	The microphone is on.

Speaker Stand button

Pressing the Speaker Stand button will turn on the Speaker Stand microphone. Pressing it again will turn it off.

The button is red when the Speaker Stand microphone is on.

CU Line In

Pressing the CU Line In button will turn on the Line input on the CU 6010.

The button is red when the input is on.

Exclusive button

Pressing the Exclusive button will open the user's microphone and close all delegate microphones. The delegates cannot open their microphones while the user's microphone is open in exclusive mode.

Pressing the button again deactivates exclusive mode.

Start Voting

Pressing the Voting Button will start a voting session. Se the later section 'Voting'.

STF

The STF (Speaking Too Fast) is an indication from an Interpreter, which presses the STF button on his Interpreter Set to give the "messages" that the present speaker is talking too fast and that it is difficult for the Interpreters to follow him.

The button is lighting red in 10 sec after the STF button on a Interpreter Set is activated.

Mute

Pressing this button will mute own microphone as log as depressed.

Main

This screen shows the user's personal information, the conference name and a list of Delegates speaking or waiting to speak.

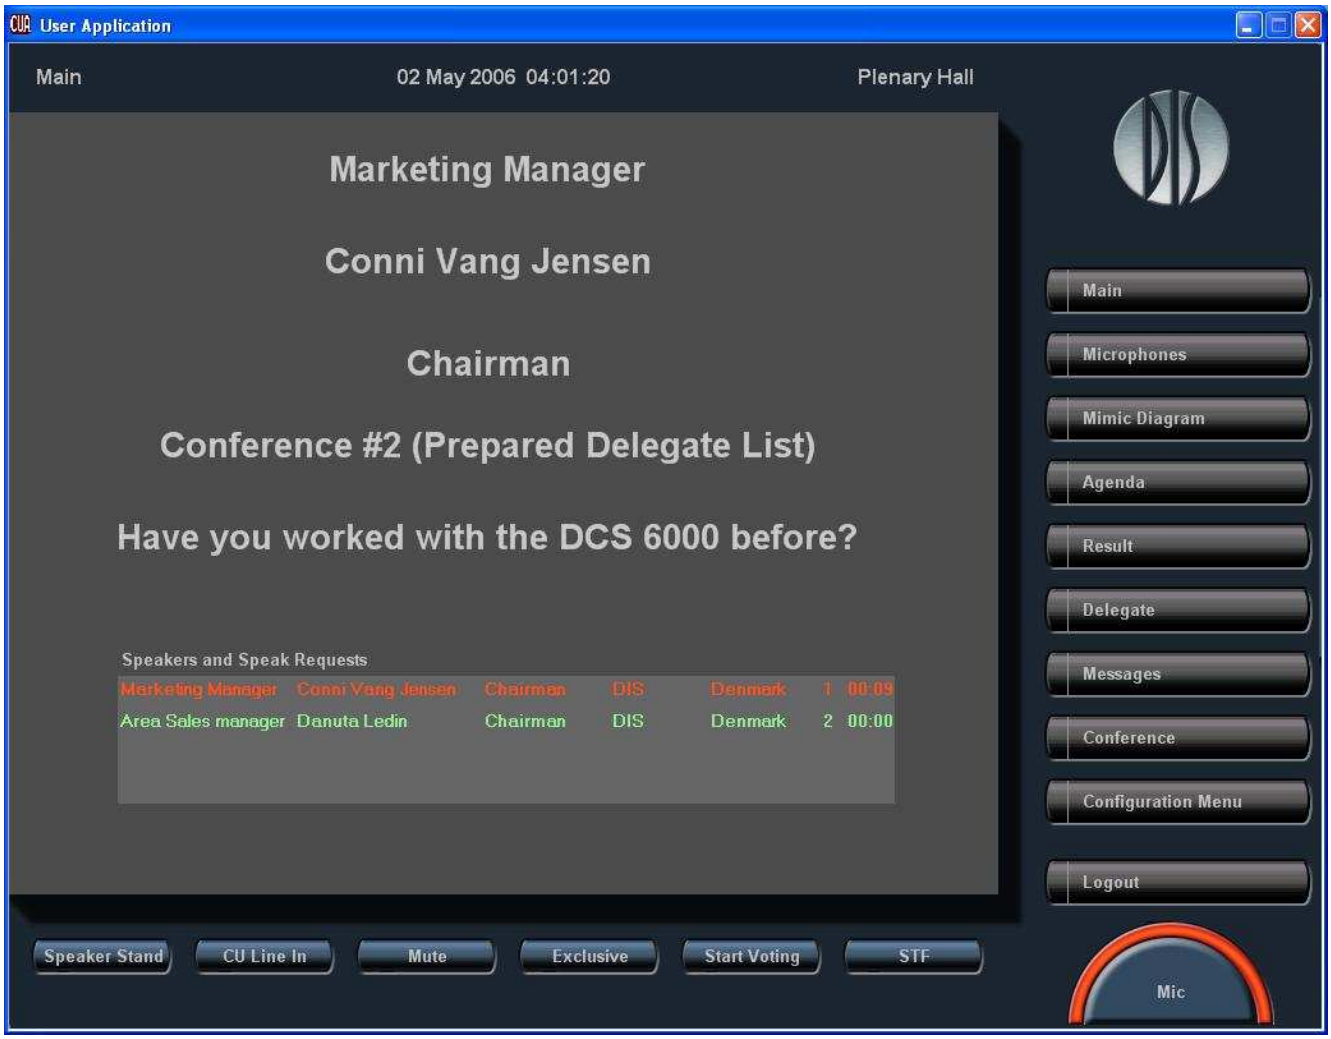

Speaking Delegates are displayed in red and Delegates in the request list are displayed in green.

Microphones

This screen allows the user to view the status of the microphones and to open or close microphones.

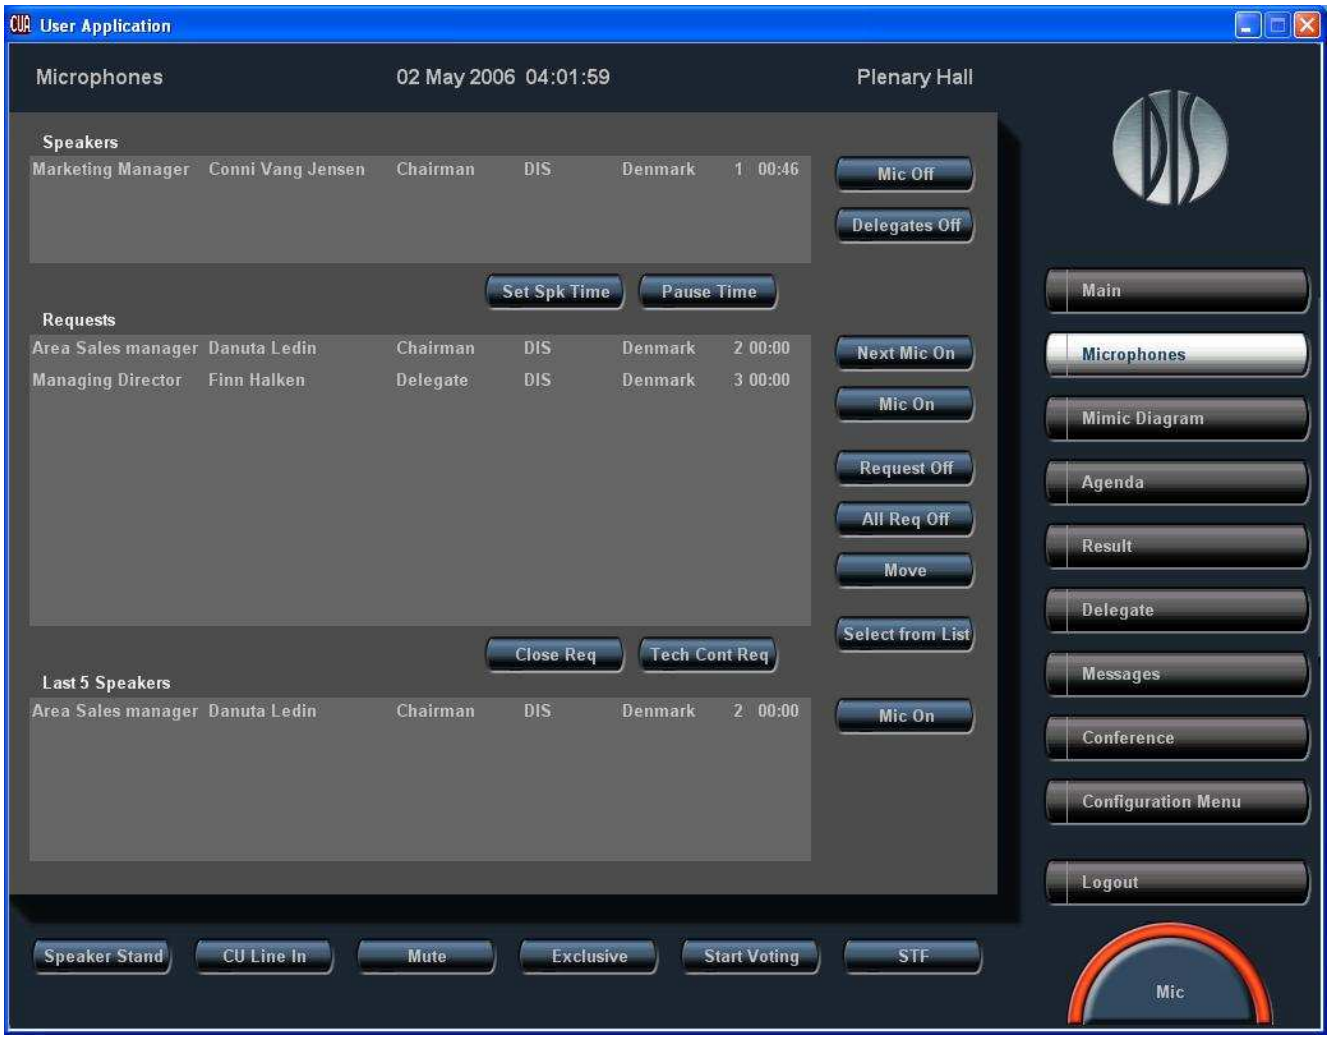

The screen is divided into three lists showing delegates speaking, delegates in the request list and the last five speakers.

The button menu next to the 'Speakers', 'Request' & 'Last 5 Speakers' lists will only be available if the 'Microphone Control' is selected in the CAA application, Setup/User Type/Functionality:

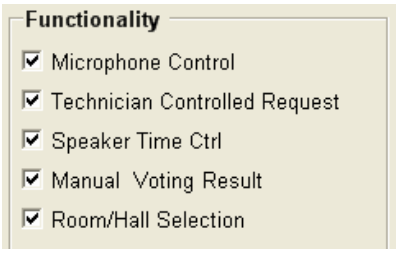

Speakers

The list shows delegates whose microphones are On. Elapsed speech time is displayed for each delegate. If the alarm time is set the speech time will flash when the alarm time is reached.

[Mic off] Select a delegate and press the button to turn off the user's microphone.

[Delegates off] Press the button to turn off all delegate microphones. Chairman microphones will not be turned off.

[Set Spk. Time] Pres this button bring a popup, where the speaking time can be set. Please refer to the 'Conference' section later in how to set speaking time.

[Pause Time] Click this button to pause the speaking time. If paused, the button will light red.

When a microphone is closed the delegate's name is inserted into the last five speakers list.

Requests

The list shows delegates who have requested to speak. The list is first sorted in priority groups. VIPs before delegates, then by the time when the request was made.

[Next mic on] Press the button to grant speaking right to the first delegate on the list. The microphone will open if the maximum number of speaking delegates has not been reached.

[Mic on] Select a delegate and press the button to grant speaking right to the delegate. The microphone will open if the maximum number of speaking delegates has not been reached.

[Request off] Select a delegate and press the button to remove the delegate from the list.

[All req off] Press the button to remove all delegates from the list.

[Move] This button is used for moving a Request up or down in the list. Pressing the move button grey out the selected request and the label in the [Move] button changes to [Insert].

The position on the request list, where the selected request is to be moved, is selected by touching a position in the request list. The selected (grey) request is then moved to a position above the "touched" position.

When the [Insert] button is pressed the selected request is moved if allowed. It is possible that the CU will decide to move it to another position since names with lower priority cannot be moved above names with higher priority. It is also possible that the CU will decide to insert it on the same position again.

The request entry will remain grey for up to 10 seconds after an insert has been performed – if the CU rejects the move command (e.g. due to a priority violation) then no command will be received from the CU and the request will remain in it's current position (previous position before move) on the list and switch back to normal display.

If the request is moved on the request list during the ongoing move operation performed by this CUA as a result of delegate activity or another CUA then this is reflected on the request list – the grey request simply moves according to the system commands.

An automatic cancel after a 10 second timeout applies to this function: If the [Insert] button is not pressed within 10 seconds then the request is re-inserted at the original position and the label in the button changes back to [Move].

[Select from list] Press the button to display a list of all delegates attending the conference and with a microphone. Select a delegate or a microphone and press [Mic on] to turn on the microphone or [Request] to put the delegate in the request queue.

Clicking [Mic on] will open the microphone if the maximum number of speaking delegates or max. open microphones has not been reached or if the delegates has right to interrupt..

[Close Req] Pressing this button will close the request queue. Not new delegate can be placed in the request queue.

[Tech. Cont Req] Pressing this button closes the request queue for all except a 'Technician' user (Seat type: Technician).

Last Five Speakers List

The list shows delegates who have been speaking most recently.

[Mic on] Select a delegate and press the button to grant speaking right to the delegate again. The microphone will re-open if the maximum number of speaking delegates has not been reached.

The list is sorted by microphone closing time so the latest speaker is on the top of the list.

Mimic Diagram

The mimic diagram displays a graphical overview of the conference room or hall. Each seat or microphone is indicated by a colored dot.

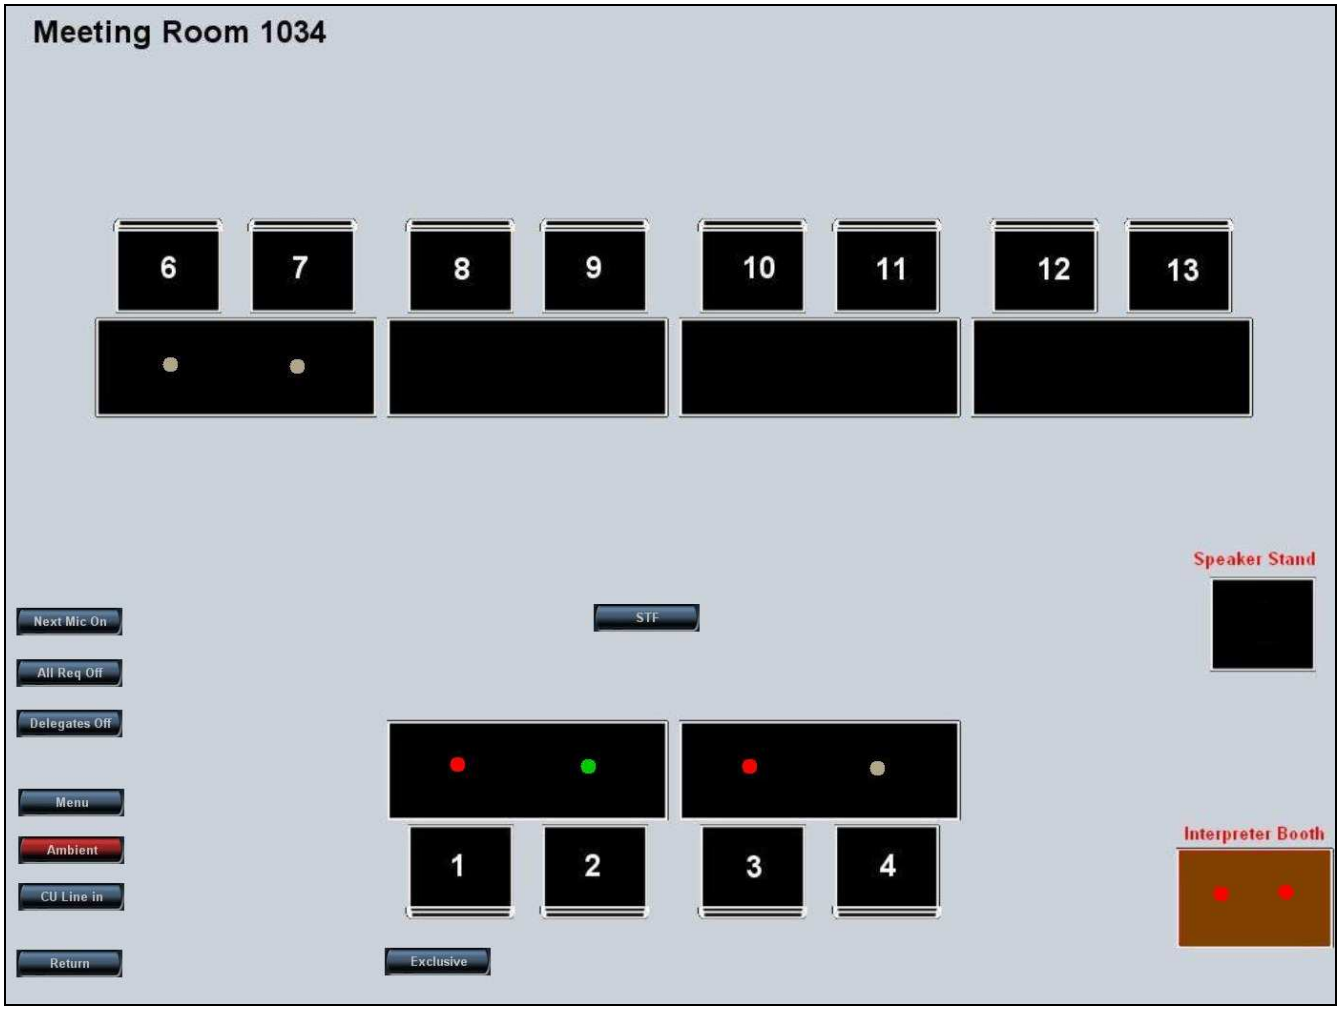

Each seat is represented by a colored dot:

Grey	No delegate is logged in at the seat
Blue	A delegate has logged in at the seat
Green	The delegate has requested to speak and has been registered in the request list
Red	The microphone is turned on

[Menu] This button switches the functionality at the mimic diagram between presenting a menu and switching On/Off the microphone directly when touching the dot representing a microphone. When activated (red colour), the menu will be presented.

The menu appears when a seat is selected showing seat number and the delegate's name. The following buttons are available:

[Mic on/off] Press the button to turn on or off the selected delegate's microphone including the speaker stand microphone or any other microphone in the room.

[Logout] Press the button to logout the selected delegate.

[Login] Press this button to login a user at the selected seat. This button is only active in the conference modes 'Login using code' or 'Login using code and list'.

[Volume control] Press the button to show a small popup for adjusting volume for the selected microphone:

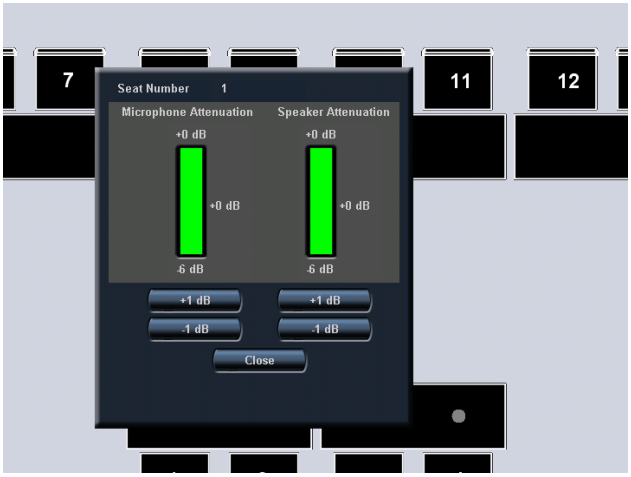

[+1dB] / [-1dB] Press (and hold) the buttons to increase or decrease the levels in steps of one dB.

[Cancel] Press the button to close the popup.

Other buttons on the Mimic diagram are:

[Next mic on] Press the button to grant speaking right to the first delegate on the request list. The microphone will open if the maximum number of speaking delegates has not been reached.

[Delegates off] Press the button to turn off all delegate microphones. Chairman microphones will not be turned off.

[All req off] Press the button to remove all delegates from the request list.

[Exclusive] Press the button to activate the exclusive speak function for own microphone. Press it again to deactivate the function. The function is described above in the Panel section.

[STF] Speaking too fast indication.

[Return] Close the mimic screen and return to the previous screen which was active when the mimic diagram screen was selected.

Agenda

This screen is used for viewing the agenda and for setting a Subject current. The agenda is created in the CAA application.

Changes made to the agenda in the CAA application will reflect the Agenda screen in the CUA immediately.

If the has been a voting session to a subject, the result and the Attendance number will be shown for those subjects.

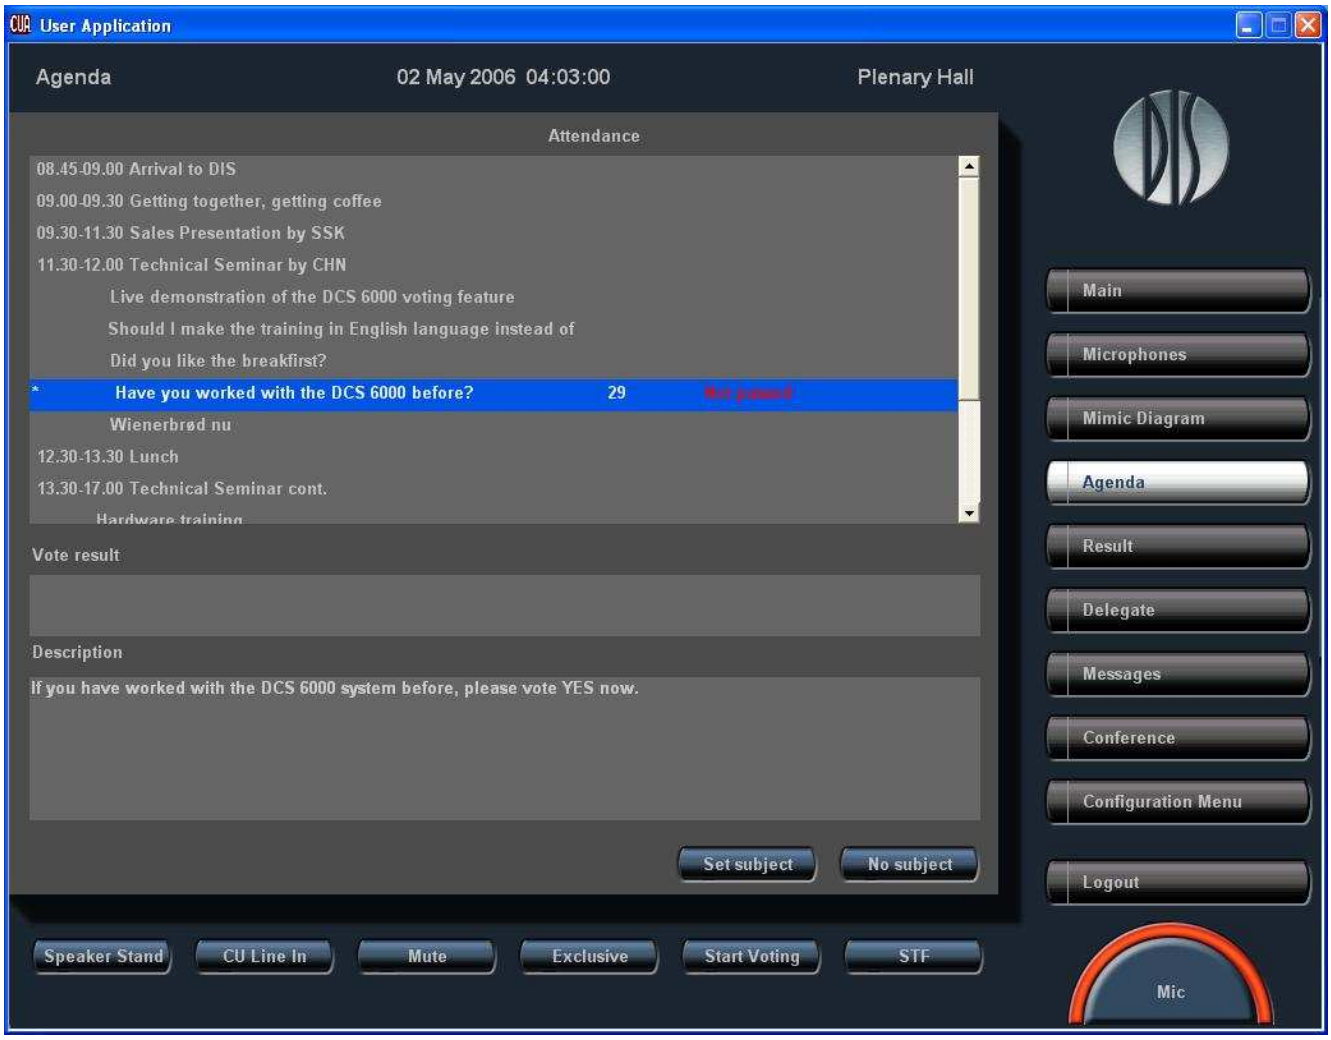

[Set Subject] Select the subject, which shall be current and press the button. This subject will now be shown as the current subject and all voting sessions started will be related to this subject.

The current subject is marked with an asterisk (*) in front of the text

[No Subject] Press this button to for setting no subjects current.

Results

This button is used to shown the result of a the last voting session.

Delegate

The Delegate screen shows delegates who are attending the conference. Only delegates who are logged into the system will be shown on the list.

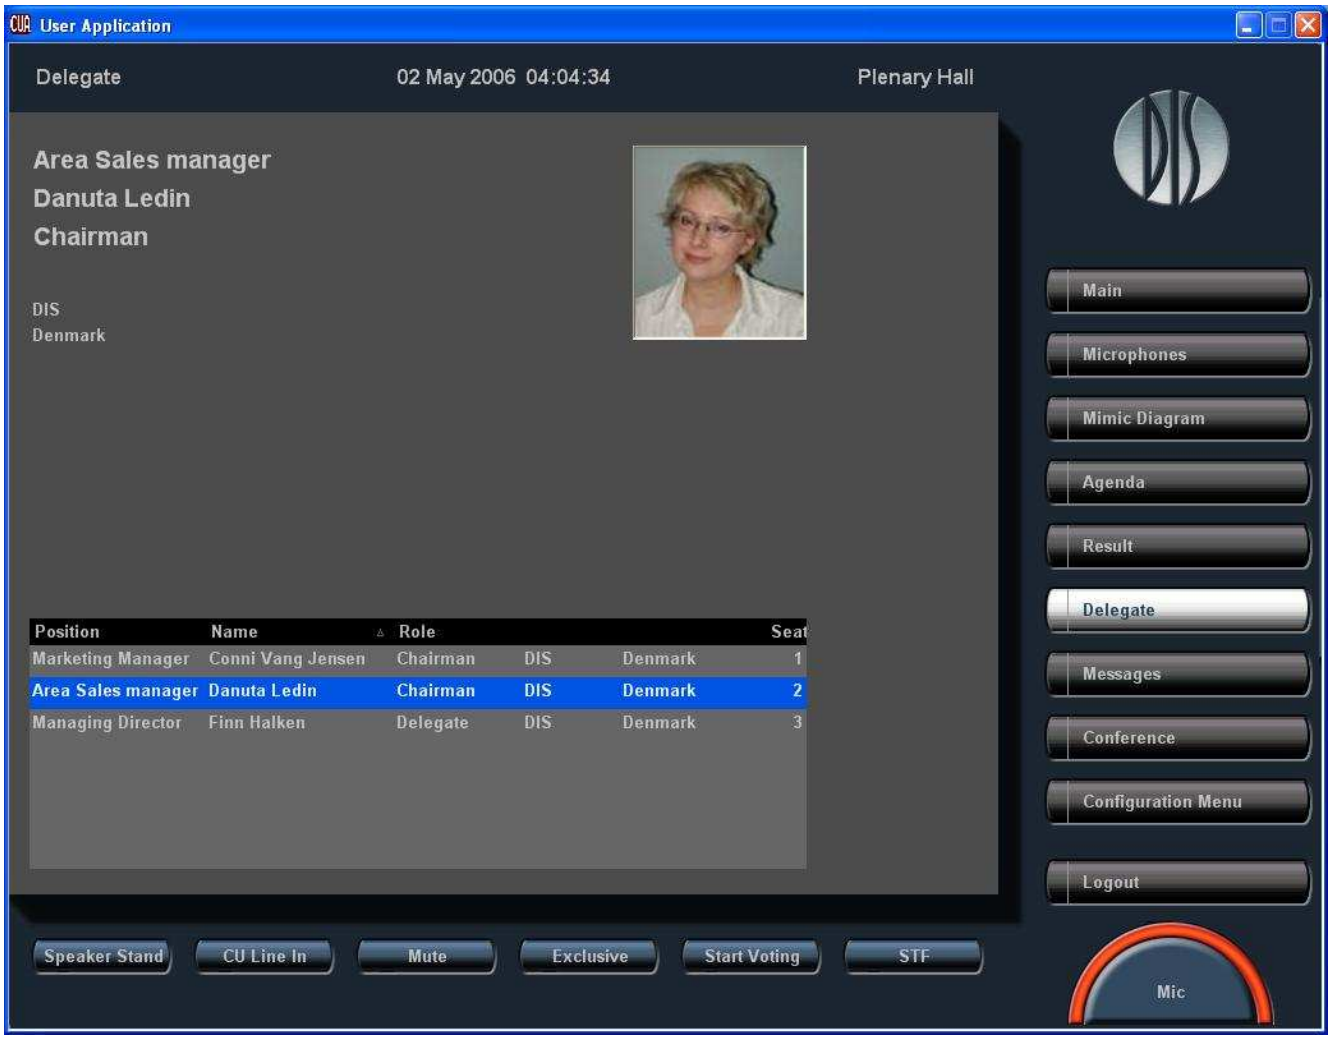

Detailed information for each delegate is displayed when a delegate is highlighted on the list.

The list can be sorted by any column by clicking on the corresponding columns header in either ascending or descending order. A small arrow will show the current sorting direction of the list.

Messages

This screen allows users to send prerecorded or written messages between each other.

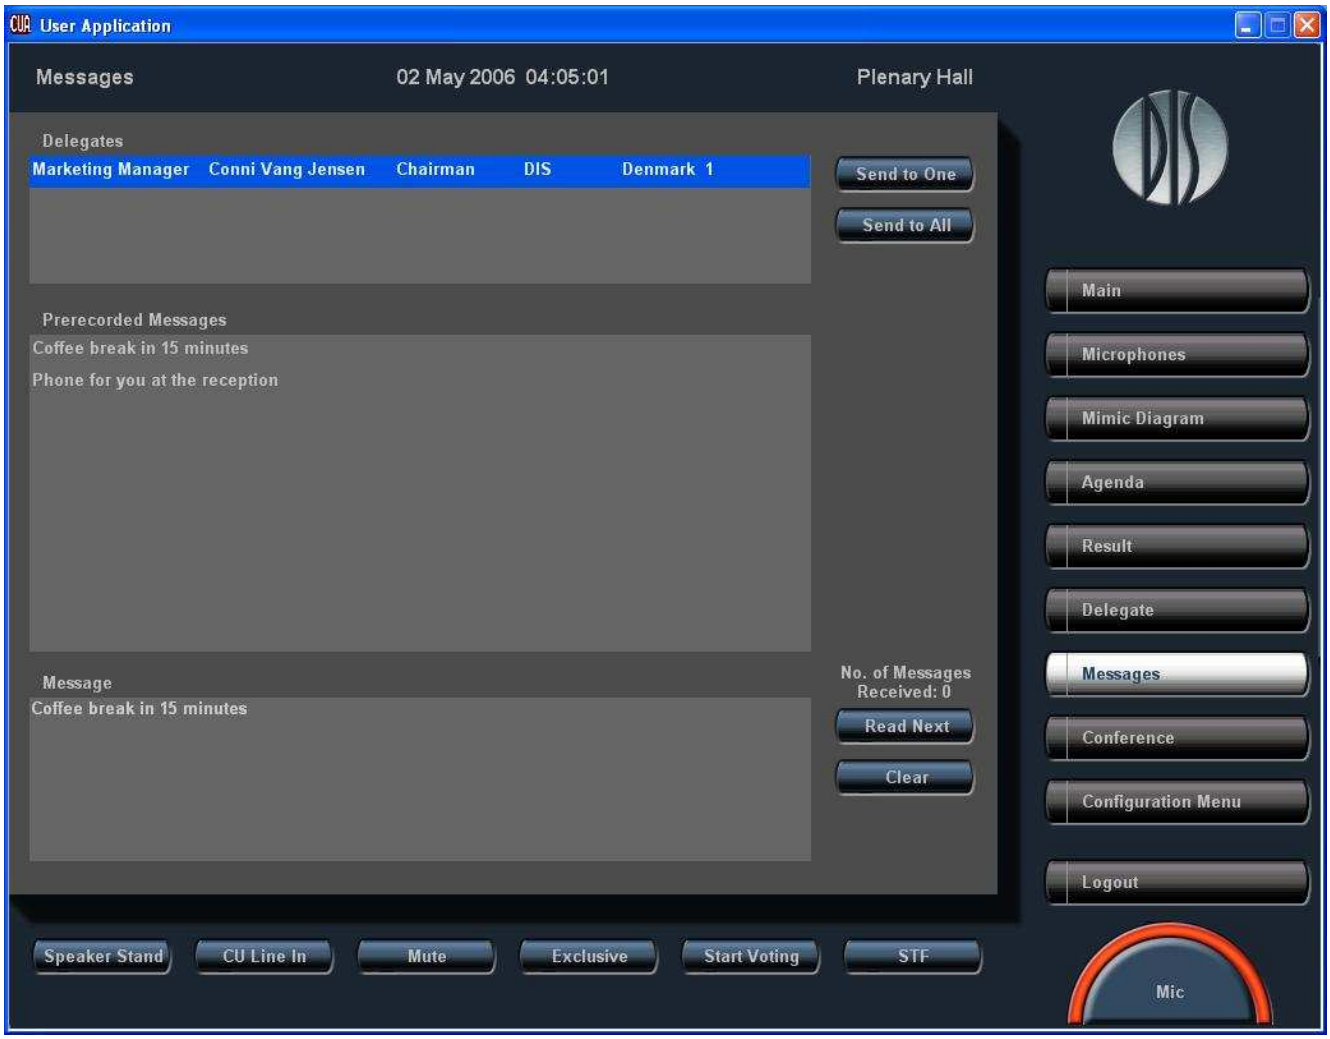

The screen is divided in three parts showing a list of delegates attending the conference having this application available to them, a list of available prerecorded messages and a message text box allowing the user to read received messages and write own messages if a keyboard is available.

[Send to one] Select a message (or write one), select a delegate from the list and press this button to send the message to the selected delegates.

[Send to all] Select a message (or write one) and press this button to send the message to all of the delegates who are attending the conference and who have this screen available to them.

[Read next] Press the button to read the next message from the queue of received messages

[Clear] Press the button to clear the message text box.

When a message is received, the ‘Message’ button will flash red until the message is read.

Conference

Stop/start a conference

This screen allows the user to start and stop conferences and to change various microphone operation settings.

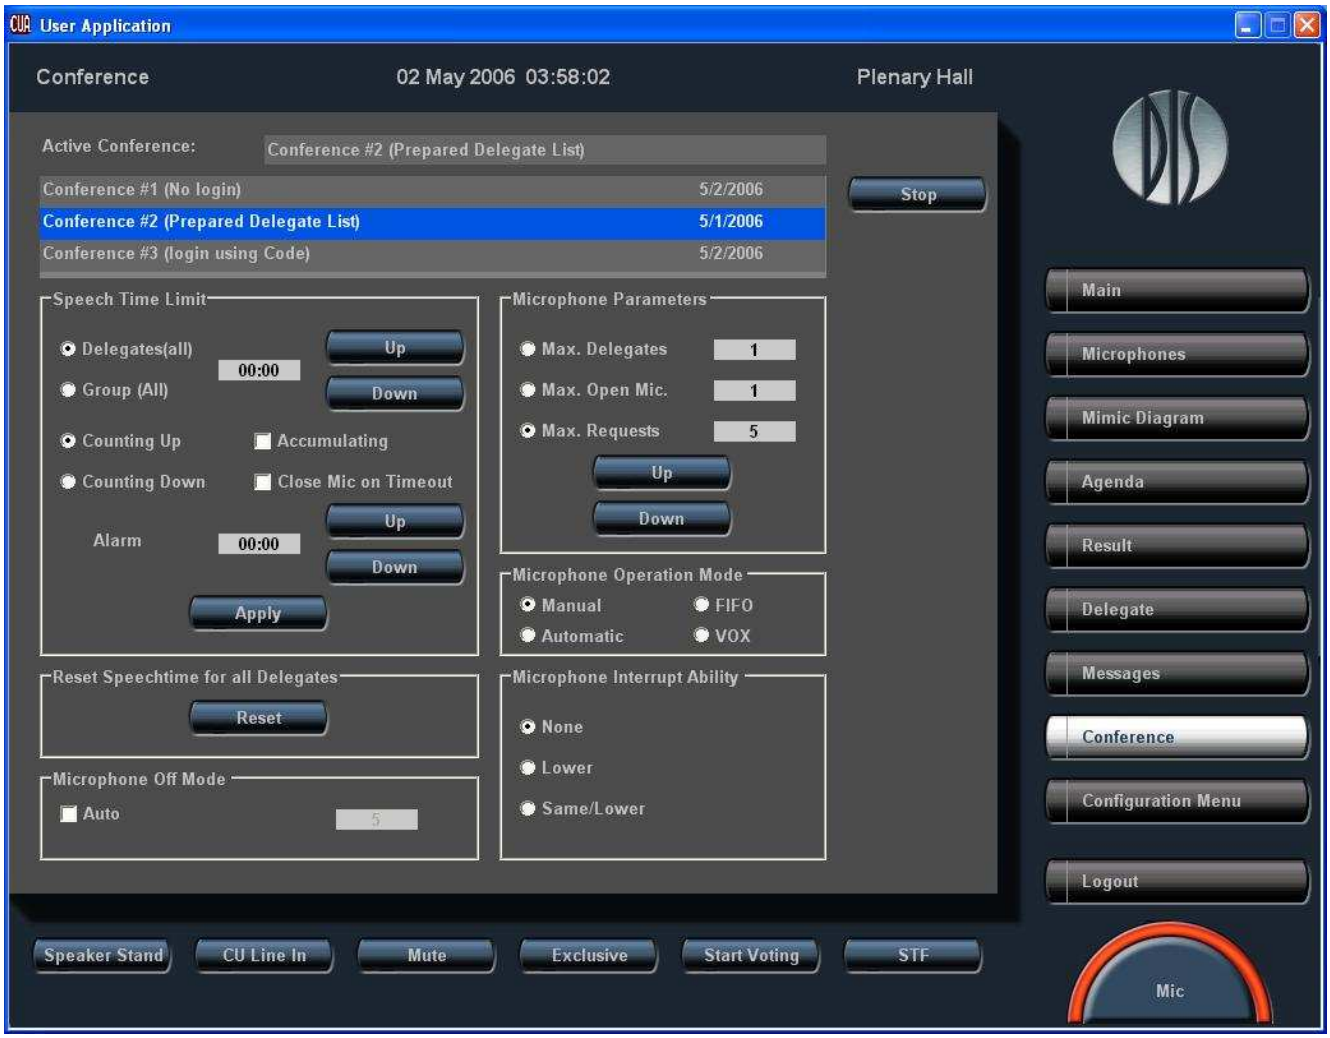

Conferences with start dates before and end dates after today's date will be displayed on the list of conferences.

[Start] Select a conference and press the button to start the conference. The button text will change to 'Stop' and the selected conference name will be displayed in the active conference field. Starting a conference with a prepared delegate list will automatically login delegates on the list.

If starting a conference with “Prepared delegate list” and no delegates has been assigned to the list the following message will appear if trying to start that conference:

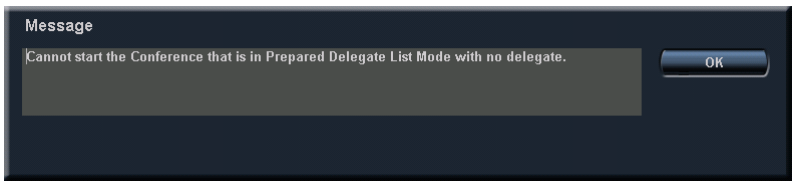

When a conference with “Prepared delegate list” is started and you try to start a CUA assigned to a seat, which is not assigned a user in the “Prepared delegate list” the following error messages will appear:

[Stop] Press the button to stop the active conference. The button text will change to ‘Start’. All delegates will be logged out automatically.

The full functionality of the system is available even if no conference is started. Seat numbers will be displayed instead of delegate names.

The various settings on this screen will be initialized with the values that were specified for the active conference. The user can change these settings during the conference at any time.

[Save settings] Press this button to execute any changes made to the various settings.

Speech time limit

The purpose of the speech time limit is to limit the time each delegate can speak during a meeting.

Limit Set the speech time limit by either pressing the [Up] and the [Down] button or by using a keyboard. Setting the time to 00:00 disables the speech time limit function.

[Accumulating] Set this option to add up the speech time every time a delegate is speaking. If the option is not set then the speech time limit will reapply every time a delegate is speaking.

[Close mic on timeout] Set this option to have the microphones turned off automatically by the system when the speech time limit is reached.

[Incrementing] Select this option to make speech time counters display elapsed time starting from zero and counting up.

[Decrementing] Select this option to make speech time counters display elapsed time starting at the speech time limit and counting down to zero.

Alarm	Set the alarm time by either pressing the [Up] and the [Down] button or by using a keyboard. This will cause the speech time counters to flash the specified amount of time before the limit is reached. Setting the time to 00:00 disables the alarm time function.
[Reset]	Press the button to reset the internal speech time counters for all delegates. Use this together with the accumulating setting to control several cases of limited speech time per delegate during a conference.

Microphone Parameters

Press the [Up] and [Down] buttons to set the maximum numbers of delegate, open microphones or speak requests.

Maximum open simultaneous microphones allowed can be set from 1 to 8.

Maximum simultaneous requests to speak allowed on the request list can be set from 0 to 255.

Microphone Operation Mode

Select one of the three values:

Manual	All requests to speak from delegates will automatically be inserted into the request list. The microphones must then be turned on from the 'Microphone' screen or from the 'Mimic Diagram' screen. Microphones with Chairman priority will turn on directly even if the maximum number of open microphones has not been reached.
Automatic	All requests to speak from delegates will either result in an open microphone or a rejected speak request depending on the number of already opened microphones. The request list is not used.
FIFO	All requests to speak from delegates will either result in an open microphone or the request to speak being inserted onto the request list depending on the number of already open microphones. The first delegate's microphone on the request list will automatically be turned on when a microphone is turned off. Changing the microphone operation mode will not override possible individual settings for a microphone.
VOX	Voice activation mode allows for the microphone units to be switched on automatically if speaking into the microphone or by pressing the microphone ON/OFF button.

Note. This Operation mode will only apply to units (seats) with 'user type' which has the following individual settings:

Microphone parameters

Operation mode:	Use CU mode
Speak Priority:	The same priority (1-4) for all units, which shall run in this mode
Interrupt Ability:	Use CU mode

Microphone Interrupt Ability

Select one of the three values:

None Cannot interrupt another speaker

Same Can interrupt a speaker with a speak priority less than own speak priority

Same/Lower Can interrupt a speaker with the same speak priority or a speak priority which is less than own speak priority.

Configuration menu

Selecting the ‘Configuration Menu’ displays new buttons to access screens for changing parameters and settings

Each selection on the menu calls one of the screens, which are described one by one in the next sections.

The menu selections available to the user depend on the settings of the role that was assigned to the user or the seat by the CAA (Conference Administration Application) during configuration of the seats and assigning of roles when adding delegates.

.

Interpretation

This screen allows the user to monitor the interpreters and to setup and control the individual Interpreter Sets

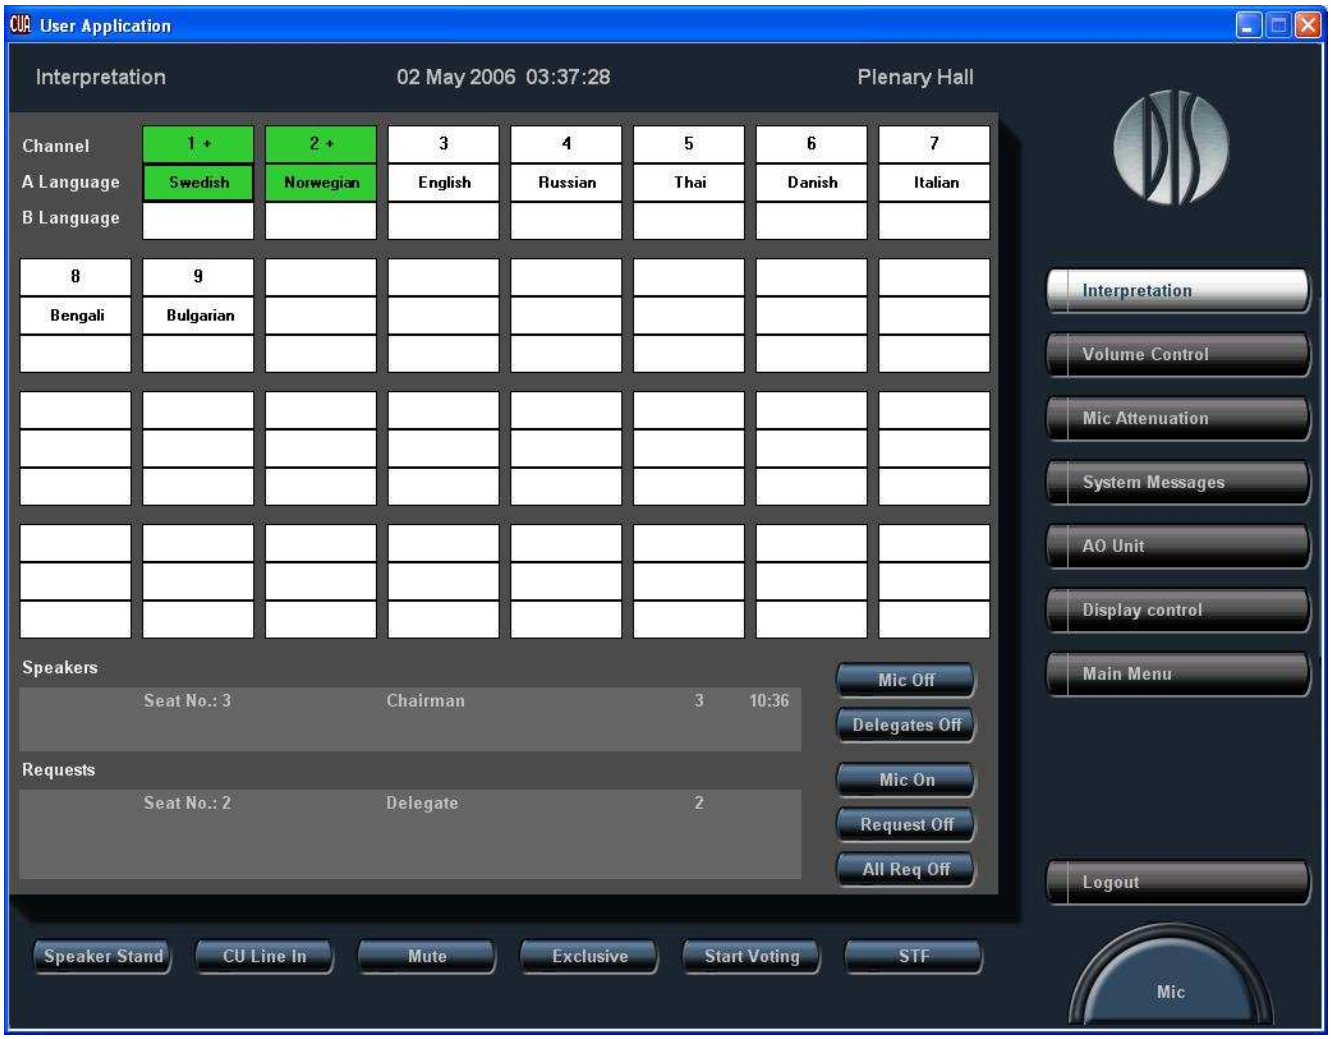

The ‘Interpretation’ screen is divided into two main parts.

Speakers & Request

The lower part is divided into two lists showing the ‘Speakers’ and ‘Request’ lists. Functionality of the lists and the buttons next to the list are as explained in the chapter ‘Microphones’.

The button menu next to the ‘Speakers’ and ‘Request’ lists will only be available if the ‘Microphone Control’ is selected in the CAA application, Setup/User Type/Functionality:

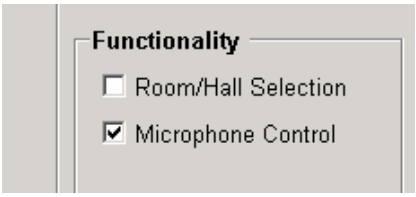

Language channels

The upper part shows the status of the 'Language channels:

Box: Booth number 1-31. The sign after the number represent the 'quality' of the Interpretation (please refer to the user manual for the Interpreter set).

A Language This field is showing the A-language for the booth. A 'Green' indication shows, that interpretation on language A in going on in the booth.

B Language This field is showing if interpretation on the B-language is taken place. A 'Green' indication shows the 'Channel' number and 'Language'. The sign after the number represent the 'quality' of the Interpretation (please refer to the user manual for the Interpreter set).

Clicking the 'Box' field for any of the channels bring up a screen for controlling/setting up the individual interpreter set in each booth. If no interpreter sets are configured for this channel, the screen will not appear. .

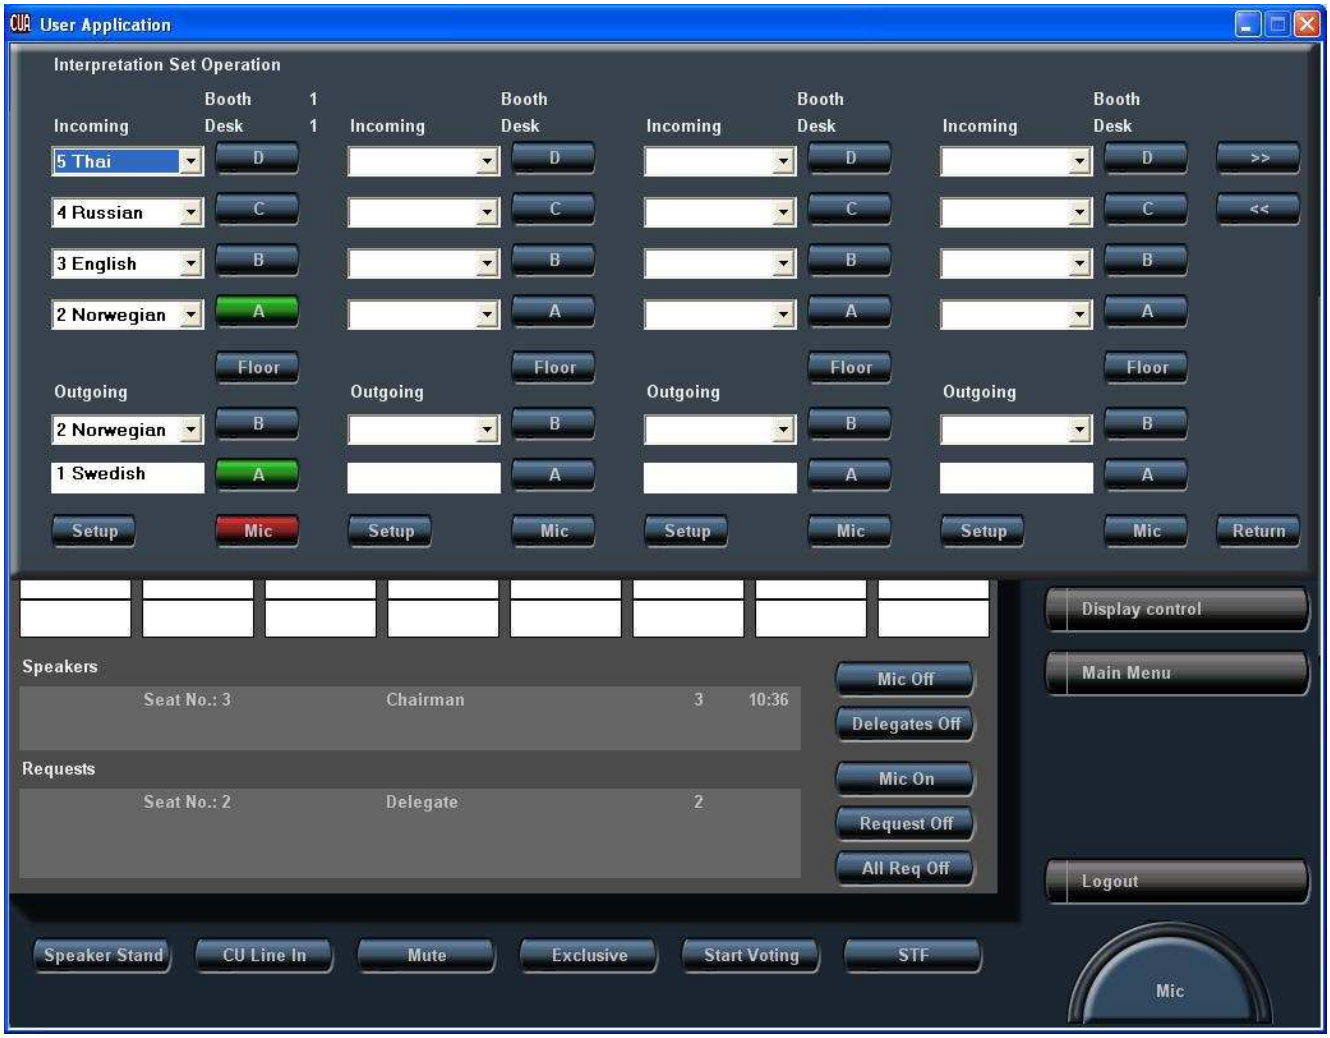

The operating settings are available for each set.

[Mic] Pressing the ‘Mic’ button turn On/Off the microphone in the booth.

[Setup] This button bring up the setup menu for the interpreter set:

For explanation of the various setup modes, please consult the IS 6132 P User Manual

[Other buttons] For the use of the other buttons please consult the User Manual for the Interpreter Set.

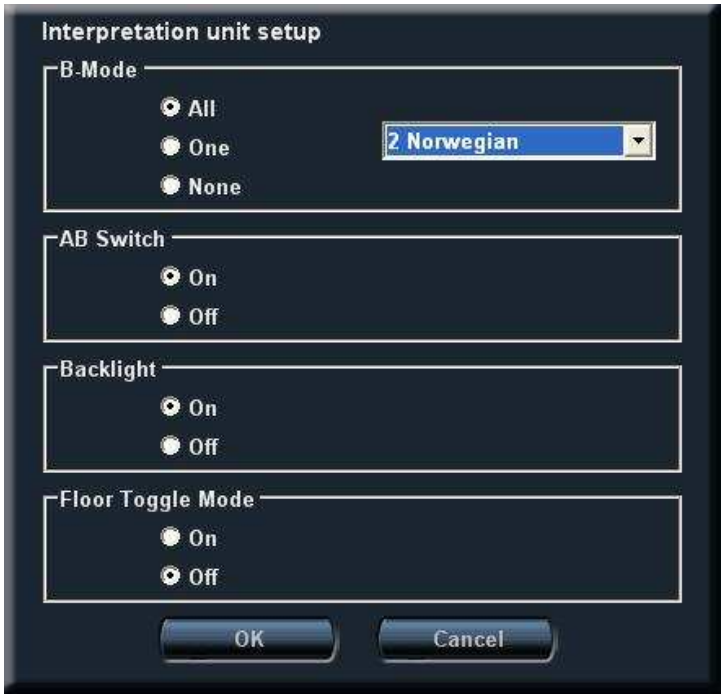

Volume Control

This screen allows the user to turn up and down for various volume controls in the CU 6010 Central Unit.

The User Manual for CU 6010 Central Unit explains in details the functions of the individual volume controls, however please note the following:

[+1dB] / [-1dB] Press (and hold) the buttons to increase or decrease the levels in steps of one dB.

[Mute] This button mutes the Control. When muted, the button changes to red colour.

Indication The indication next to the graphic illustration of the volume indicates the actual setting of the volume (in dB). When the volume setting is turned all down, this indication changes to 'Off'.

[Microphone Attenuation]

This control is used to adjust the Microphone level for all microphones. If individual settings of the microphones are used, then changing this level will bring all microphones back to the same level. So don't use this control, if the level has been set individual for the microphones.

Hint: Before performing individual setting of the microphones, it might be useful to use this control to set the level to '-3dB' for all microphones. Then the individual adjustment of the microphones can be done as +/- 3 dB instead of -6dB.

Mic Attenuation

This screen allows the user to change volume settings for individual microphones during a meeting.

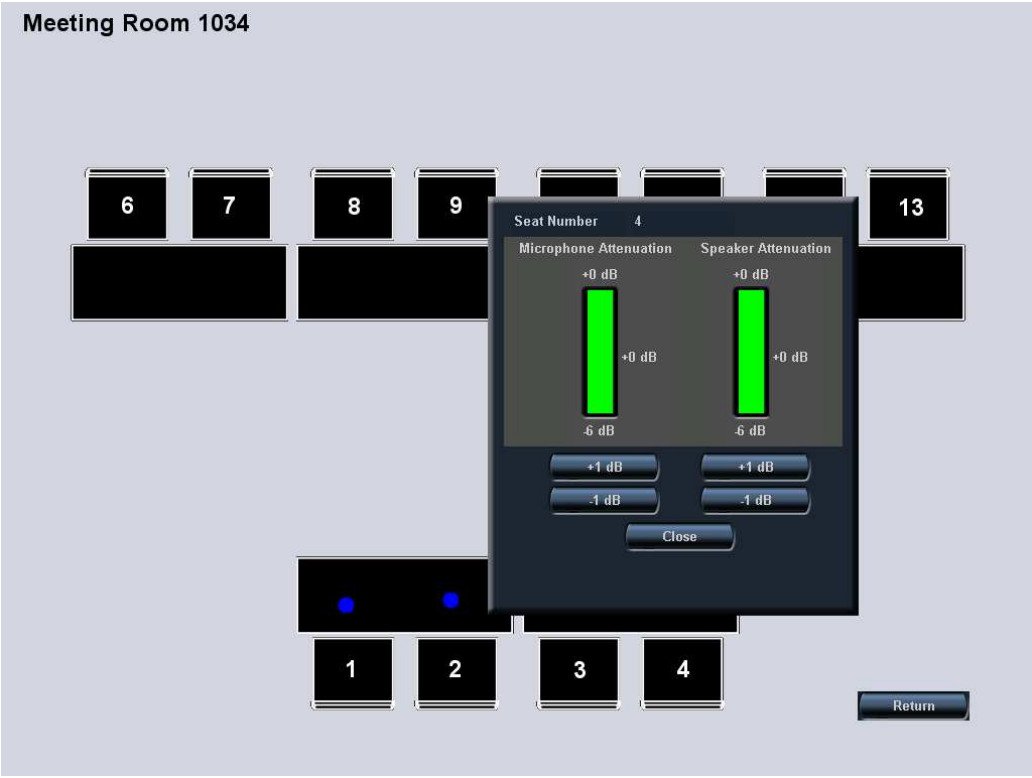

Select any seat equipped with a microphone and press the [Volume control] button. A small popup appears that allows adjusting of volume for the selected microphone.

[+1dB] / [-1dB] Press (and hold) the buttons to increase or decrease the levels in steps of one dB.

[Close] Press the button to close the popup.

System Messages

System messages are displayed on this screen.

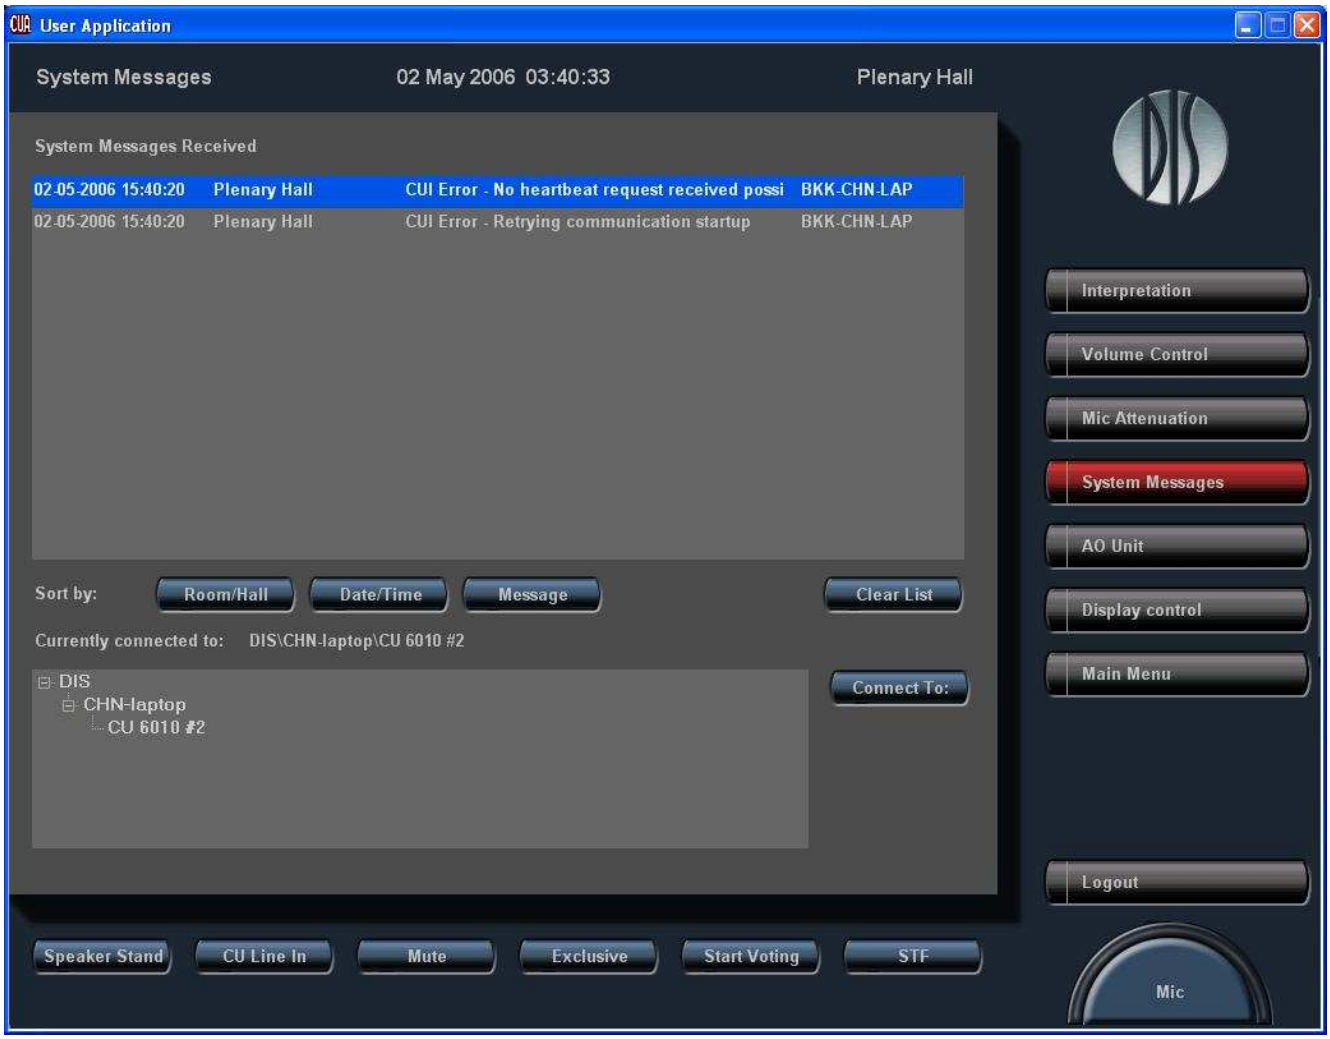

[Room/Hall] Press the button to sort the system messages by the name of the room.
[Date/Time] Press the button to sort the system messages by the date/time they were received.
[Message] Press the button to sort the list alphabetically by the message text.

[Clear list] Press the button to clear the list.

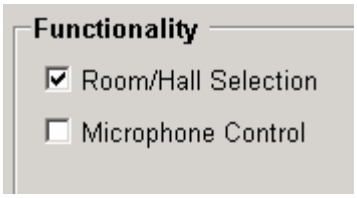

Room selection

[Connect To] This button is used to switch between the available configured rooms.The button is visible if the Room/Hall Selection is selected in the CAA application, Setup/User

AO unit

This screen allows the user to set output channel and volume for eight outputs from one or more AO units connected to the CU.

Selecting an AO unit

An AO unit is identified by the system in the same way as microphone units. It has a serial number and first time an AO unit is connected to the CU a row in Setup/Equipment/AO boxes is created with a seat number following the same naming rules as for microphone units.

The 'Comment' field in the 'Seat' table is used to create a label for the AO units (e.g. "AO unit 2 – channel 8 - 13" for AO unit no. 2 as shown). The label identifying the AO is shown to the right of the 'Next' button.

[Next] Used to "scroll" between existing AO units if more than one exists. This button shows the next unit sorted by name.

[Previous] Used to “scroll” between existing AO units if more than one exists. This button show the previous unit sorted by name.

Channel Selection

An AO unit has eight analogue outputs named A to H.

Any one of the 32 digital sound channels can be assigned to each of the 8 outputs. Channel 0 is the Floor sound and channel 1 to 32 is an interpretation channel.

The available languages are selectable from the drop down list.

Volume Control

The volume for each of the 8 outputs can be set to off and from -40 dB to +15 dB in steps of 1 dB.

The volume can be turned up and down by pressing and holding the two buttons [-1dB] and [+1dB] in the same way as in the present implementation of the volume control screen.

When the value -41 dB is received from the CU then “Off” must be displayed.

Display control

This screen allows the user to select the display to show on each of the connected CDA applications.

The screen will show a button menu for all the CDA displays, which are configured in the 'CAA – Setup/Equipment/Conference Displays'. Up to 8 displays can be used.

For each of the CDA applications the button menu with 8 buttons is available for selection of the display to show.

The configuration of the screens is done in 'CAA - Setup/Conference displays'. Please refer to the 'CDA User Manual' for details. The next table shows examples of the displays, which will be shown by pressing the buttons:

Buttons	Display
Automatic	If this option is selected an event-controlled display will take place, The configuration is done in the 'CAA - Setup/Conference displays'.
Microphones	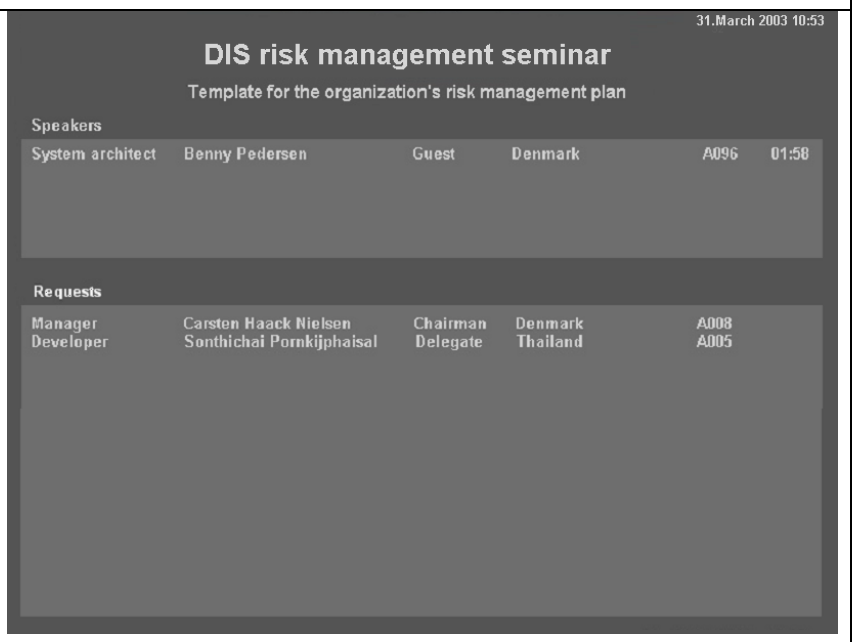
Voting	

Voting graphics	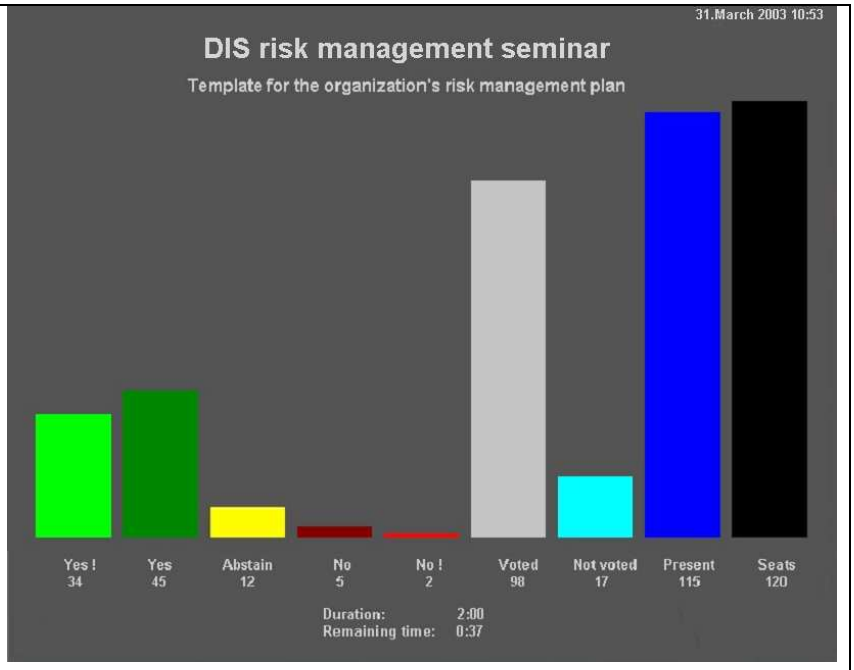
Agenda	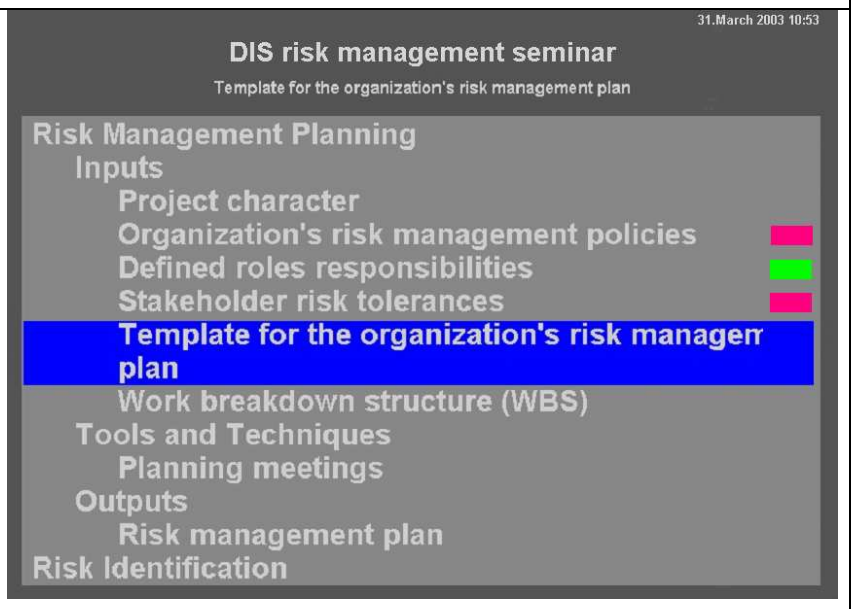

Mimic	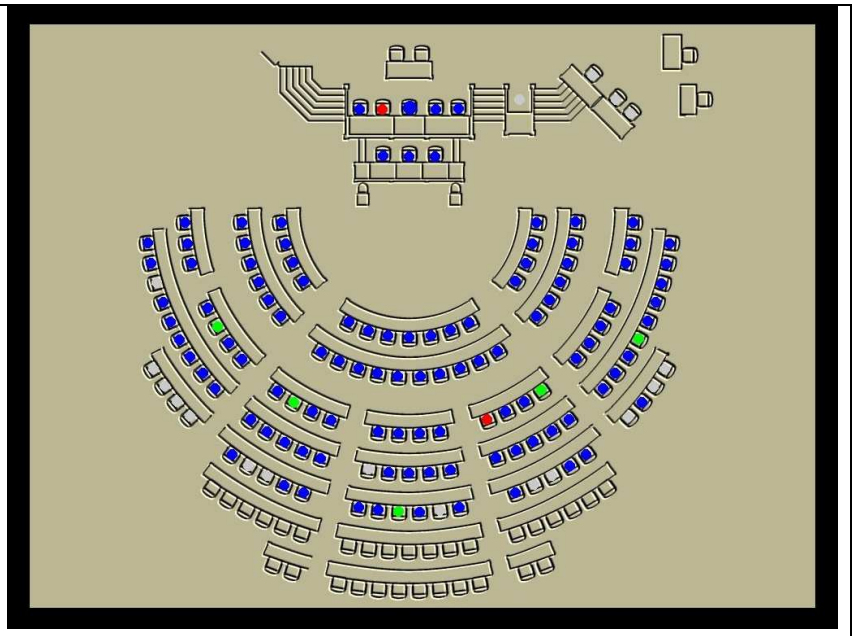
Mimic Voting	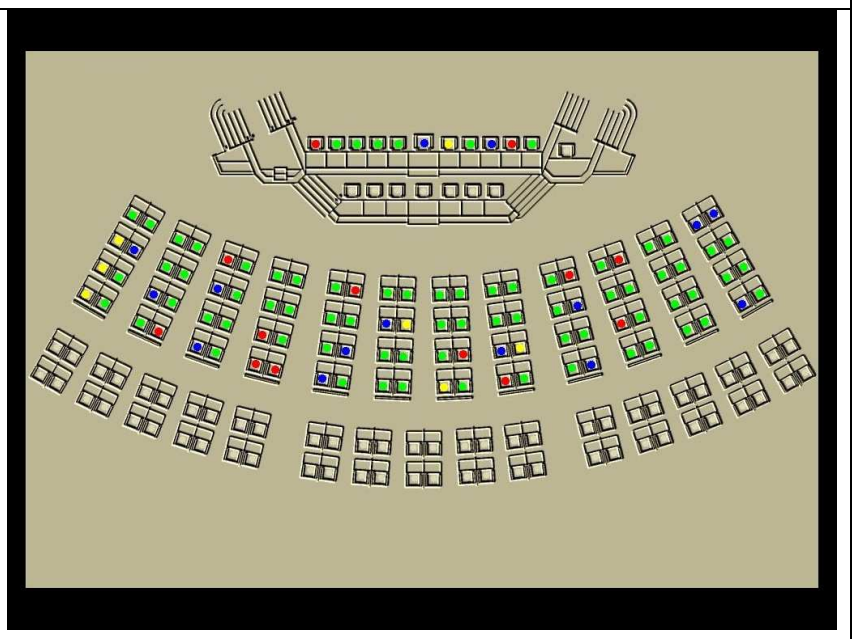
No display	The display will show a background colour as specified in the CAA.

Main Menu

This button brings up the Main screen

Voting

Pressing the voting button starts a voting session. After pressing the button the screen will change to show the result screen and the user will be presented for a popup menu:

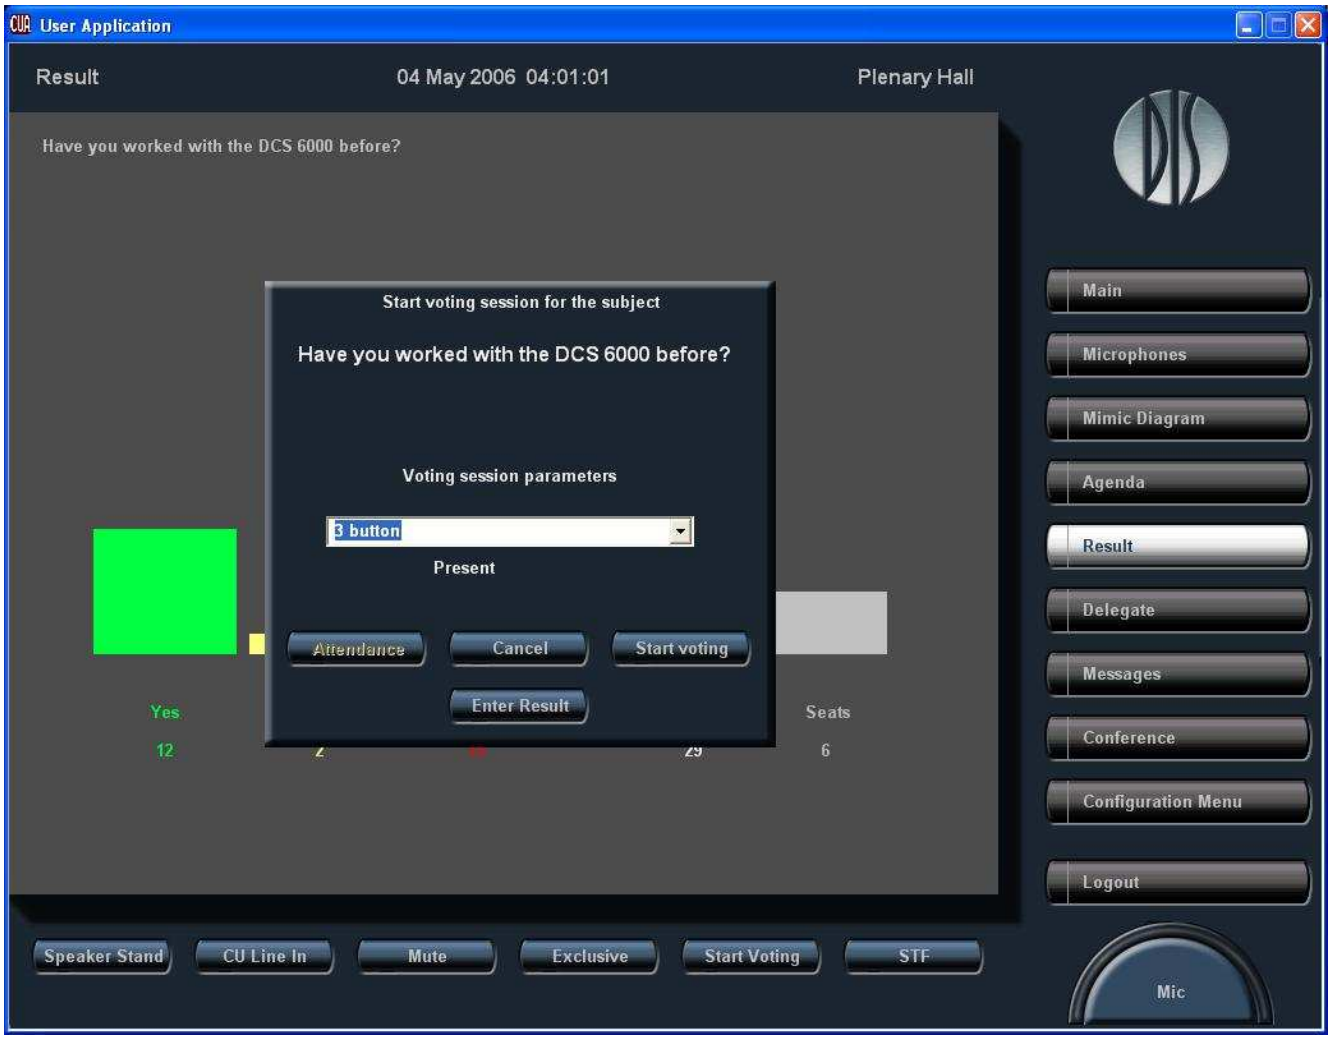

Voting session parameters

The voting parameter setup pre-selected in the CAA will be shown as the default value. However the user can select any of the available Voting Parameter Setups created in the CAA by use of a drop down box.

Buttons

[Attendance] If 'Attendance check' is required in the 'Voting Parameter Setup' used, the 'Attendance' button is enabled. Press this button to make an attendance check. If 'Attendance check is not required, the button is greyed out.

[Cancel] Press this button to cancel the session.

[Start voting] Press this button to start the voting session. If the button is greyed out, an Attendance check session has to be performed first.

Attendance check

Press the 'Attendance check' button to start an attendance check. The menu to the right will disappear and the text "Attendance check in progress" will show.

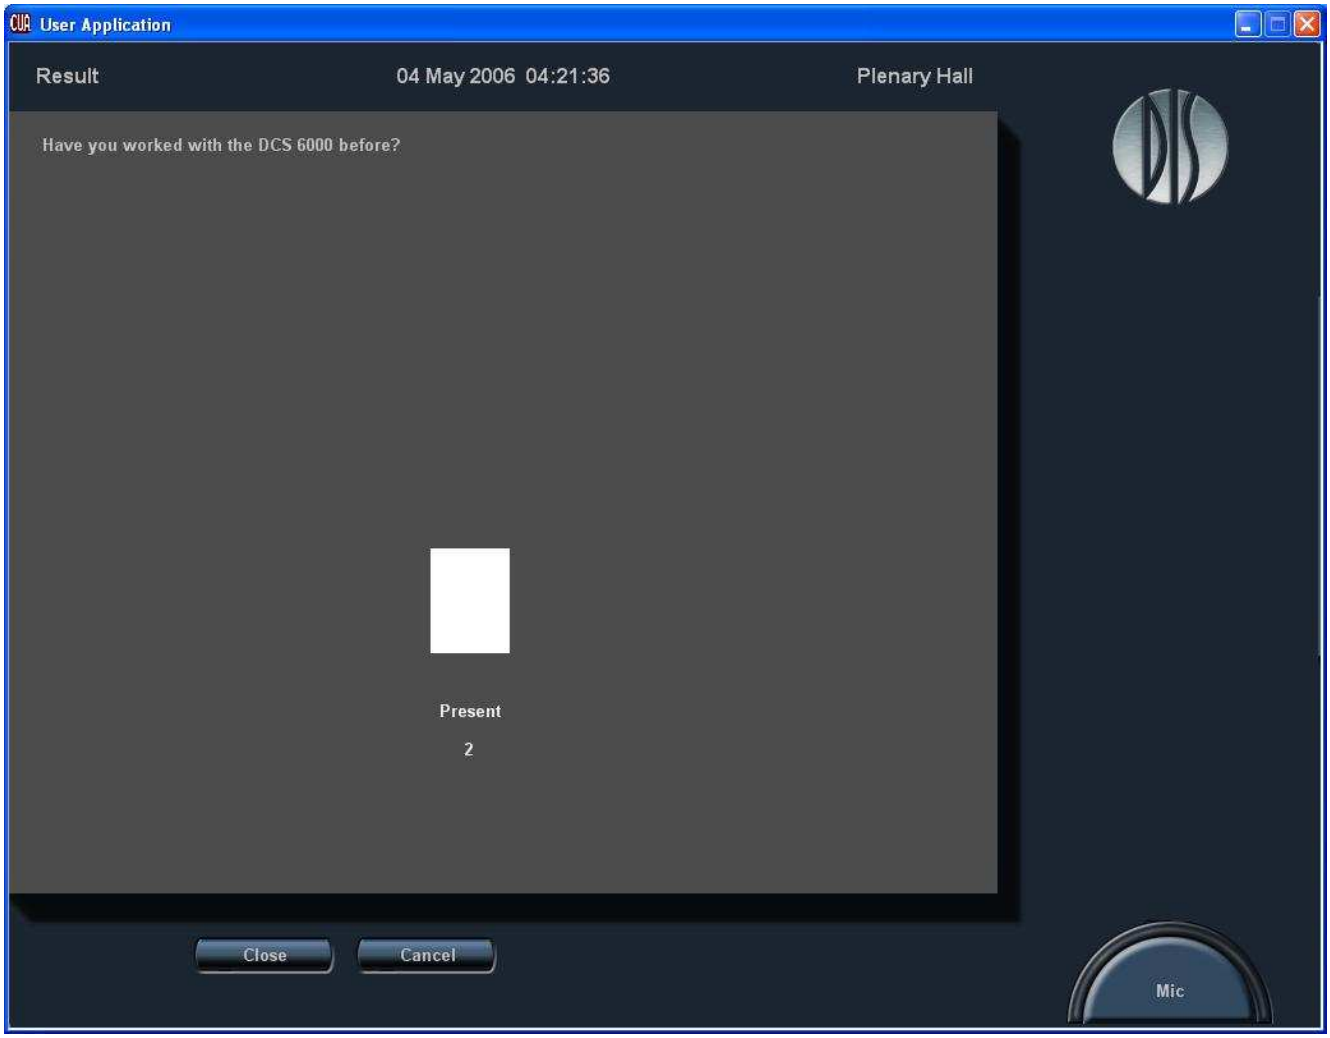

Delegates, who are present, are now required to press the 'Present' button on their voting units.

If the parameter 'Show Interim Results' chosen in the 'Voting Parameter Setup', the display will update the counts of 'Present' during the Attendance check session.

[Close] Press this button to stop the session.

[Cancel] Press this button to cancel the session.

Start voting session

Press the ‘Start Voting’ button to start a voting session.

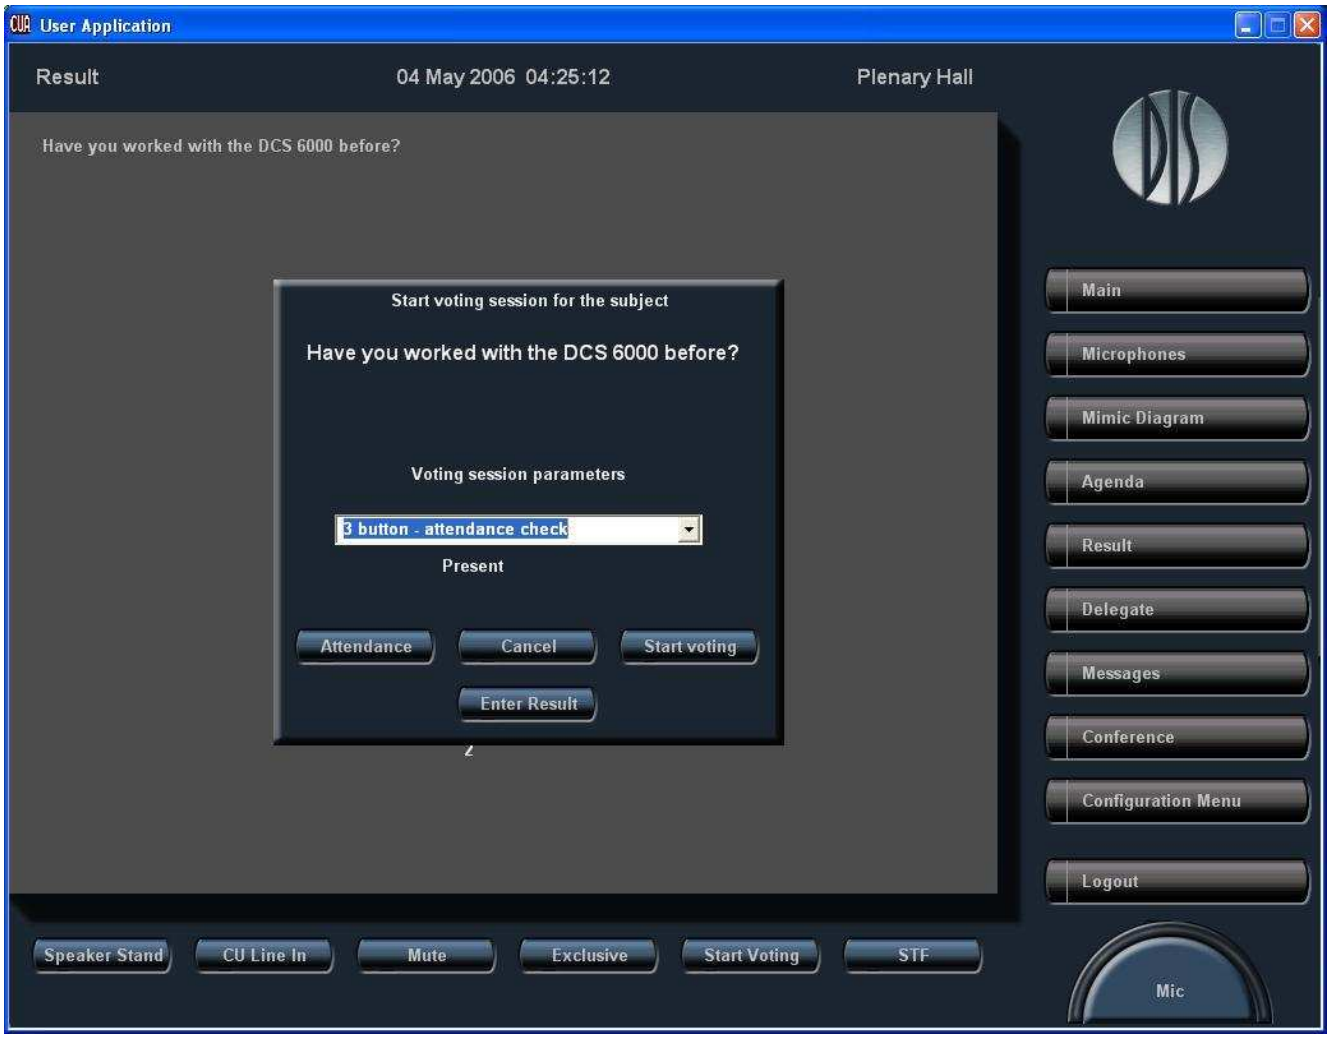

The menu to the right will disappear and the voting result will be shown:

Delegates, who want to vote, are now required to press the ‘Voting’ button on their voting units. The choises are: Yes, No or Abstain. The use can change his choice until the voting session is ‘Closed’

If the parameter ‘Show Interim Results’ chosen in the ‘Voting Parameter Setup’, the display will update the counts of ‘Present’ during the Attendance check session. If the parameter “Secret” voting was chosen, no individual result will be shown on mimic screen and no Interim results will be shown

[Pause] Press this button to pause the session.

The session is paused for all delegates except for the delegates, which has the user rights “Right to vote when paused’. They can still cast their votes

[Close] Press this button to close the session. If the parameter “Secret” voting were chosen, the result of the voting session would now be shown on the CUA display and on the CDA display.

[Cancel] Press this button to cancel the session.

Stop voting session

Press the ‘Close Voting’ button to stop a voting session. The result will be stored in the database and the total results presented on the voting result screens at the CUA’s and CDA’s. The menu to the right will appear again.

The result ‘Passed’ or ‘Not Passed’ will be shown on the screens as well and the result will be written to the agenda.

Vote from CUA

If the user has the user right to ‘Vote on CUA’ voting button will appear on the CUA screen when a voting session is started:

3 button voting from CUA

5 buttons voting from CUA